

Excavator Mounted Attachments

Due to variations in boom length, coupler location on boom and coupler manufacturer, Baumalight does not provide hydraulic hoses and couplers with excavator mounted attachments.



Hoses that connect the attachment motor/valve and case drain to excavator hydraulic system are to be provided by the installer or dealer.

Installer/dealer provided hoses are not covered by the Baumalight attachment warranty.

The installer/dealer must determine the correct length, couplers required and a safe routing for the hoses and wire harness (if equipped).

Note: The following images show a tree saw. The procedure would be similar for other attachments.

1. Move the attachment to the extreme positions.
2. Measure distance from excavator couplers to attachment motor. Keep in mind the hoses must have an excess loop in the center to prevent damage.

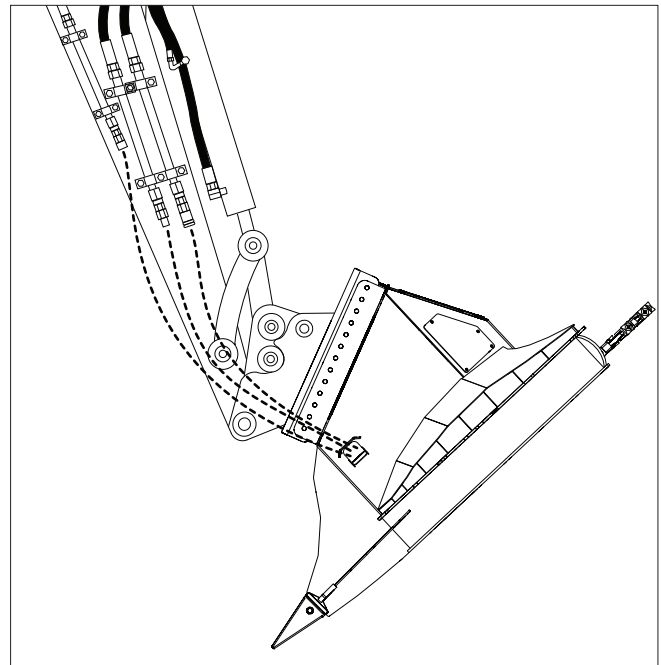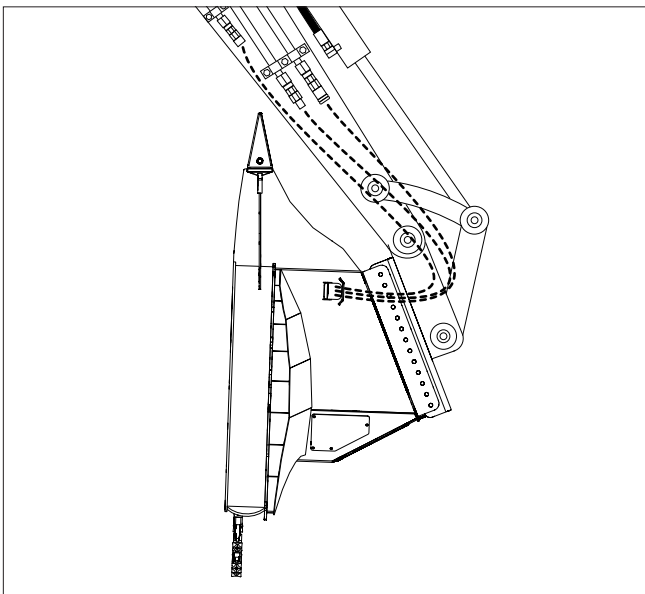

3. After installation, carefully move attachment and boom to all positions to verify hoses and wire harness (if equipped) will not be kinked or pinched.
4. Reroute if damage may occur.
5. Be certain hoses are not too long.

